


## Cutting Down the Width of an Assembled Poolside Panel


### Reducing Panel Width

Step 1 - Lay the panel flat on a surface which will not cause any scratching.

Step 2 - Mark the top and bottom rails to the required width. This is 10mm less than the desired panel width.

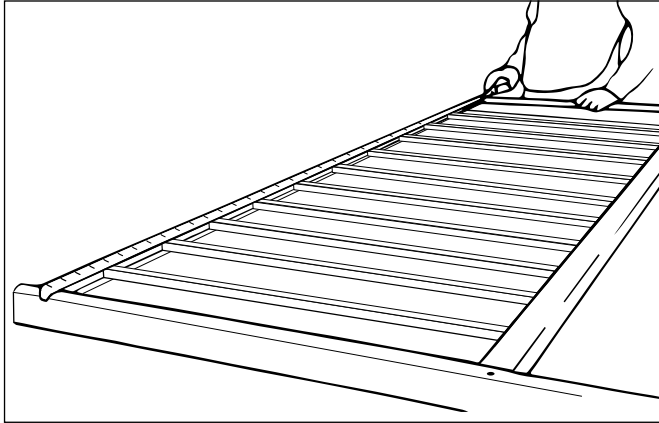


Step 3 - Place a block under the top rail and cut through using a hacksaw with a fine tooth blade. If you have difficulty with the pool channel (with the square holes) cut it using tin snips.

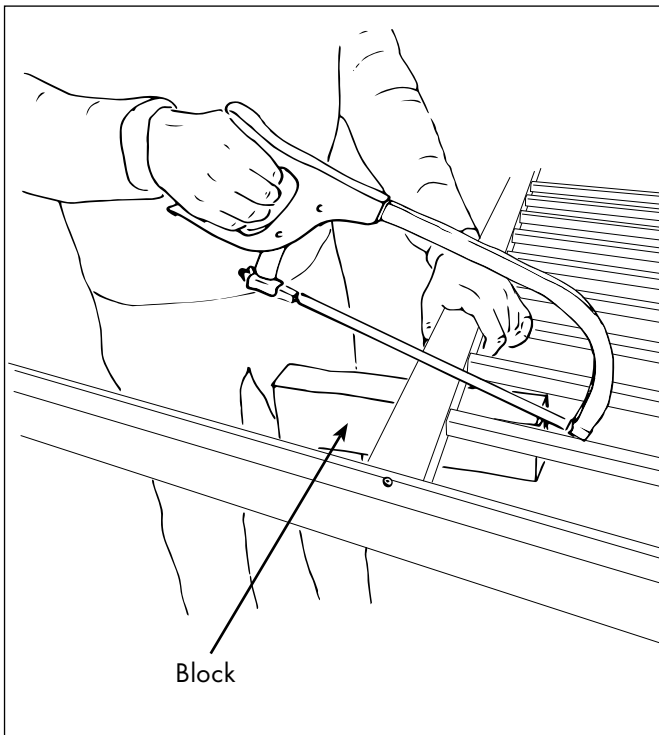

Step 4 - Cut through the bottom rail in the same way as the previous step.

Step 5 - File the sharp edges of the cut.

Step 6 - Remove the post from the discarded section and screw it to the new shorter panel.

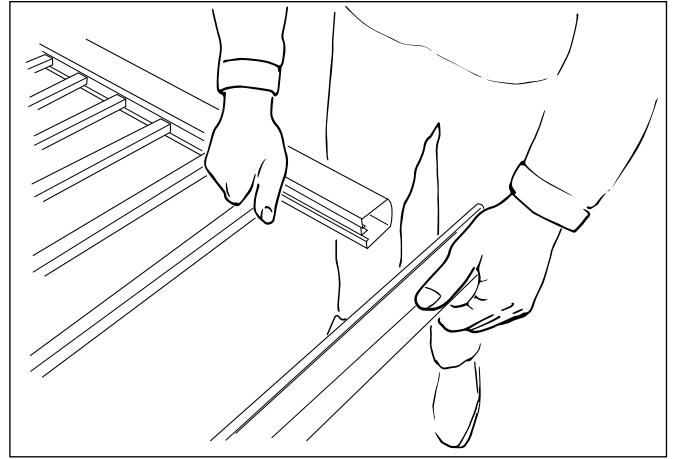

### Making Two Panels from One Panel

You will require additional components:

Fence posts: x2  
 Tek screws: x13  
 Caps: Single or Double

**NOTE: Follow all the previous steps.**